


FAIRING INSTALLATION BRACKET 92

- 1.Install the fairing according to the drawing below.
- 2.Install the clear windshield with item 13.
- 3.Install item 1 and 2 with items 10, 11 and 12 on the fairing without tightening.
- 4. If your ATV has a locker lever for the differential, which is at the right of the handlebar, uninstall it from the handlebar.
- 5. For a better adjustement, move the collar of the oil reservoir, on your left.
- 6. Without tightening, install item 4 on the handles of the ATV. Use items 3, 5, 7, 8, 9 for the right side. Use items 5, 6, 8, 9 for left side. 7. Adjust the position for all the items.
 - Note: In some case, you may have to adjust the handlebar at the good angle to install the fairing correctly.
- 8. Make sure to tight the bolts sufficiently to prevent parts from vibrating loose.
- 9. Reinstall the locker lever of the differential on item 3 (04WP-001, on the right-hand side).
- 10. Verify the clearance of the fairing by turning it. Make sure to clear the shifter and other accessories installed close to the handlebar of the vehicle.

IMPORTANT: Ensure you to keep enough space to operate the brake lever easily.

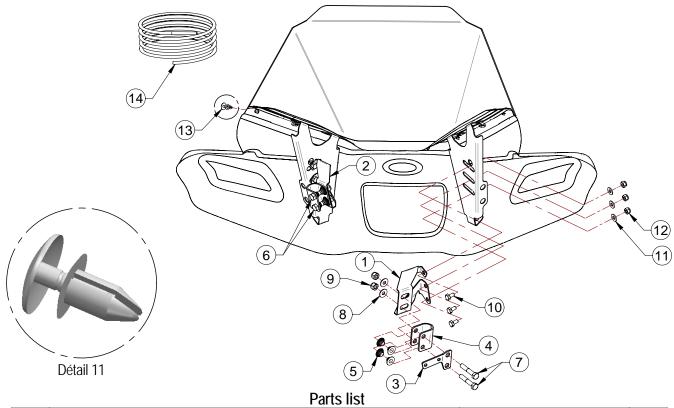

Ref.	Description	Item # (OEM)	Qty.
1	Fairing angle right	04WA-002D	1
2	Fairing angle left	04WA-002G	1
3	Support for the blocking lever of the differential	04WP-001	1
4	Handle support	04WB-001	2
5	Casing of support fairing	04BB-001	8
6	Hexagonal bolt 5/16-18NC x 1-1/2"	HB-5/16-18NCx1-1/2	2
7	Hexagonal bolt 5/16-18NC x 1-3/4"	HB-5/16-18NCx1-3/4	2
8	Flat washer 1/4" USS white zinc	FW-1/4-USS	4
9	Hexagonal locknut with nylon 5/16"-18NC	HLN-5/16-18NC	4
10	Hexagonal Bolt 1/4"-20 NC x 1/2"	HB-1/4-20NCx1/2	6
11	Flat washer 1/4" SAE white zinc	FW-1/4-SAE	6
12	Hexagonal locknut with nylon 1/4"-20NC	HLN-1/4-20NC	6
13	Pushbutton to retain the windshield	Bouton 17.5MM	8
14	2600 mm of trim 8mm (available upon request)	TRIM8MM-COUPE 2600	option