


99LB-007 : ENSEMBLE LIMITEUR BRAQUAGE/ STERING LIMITER

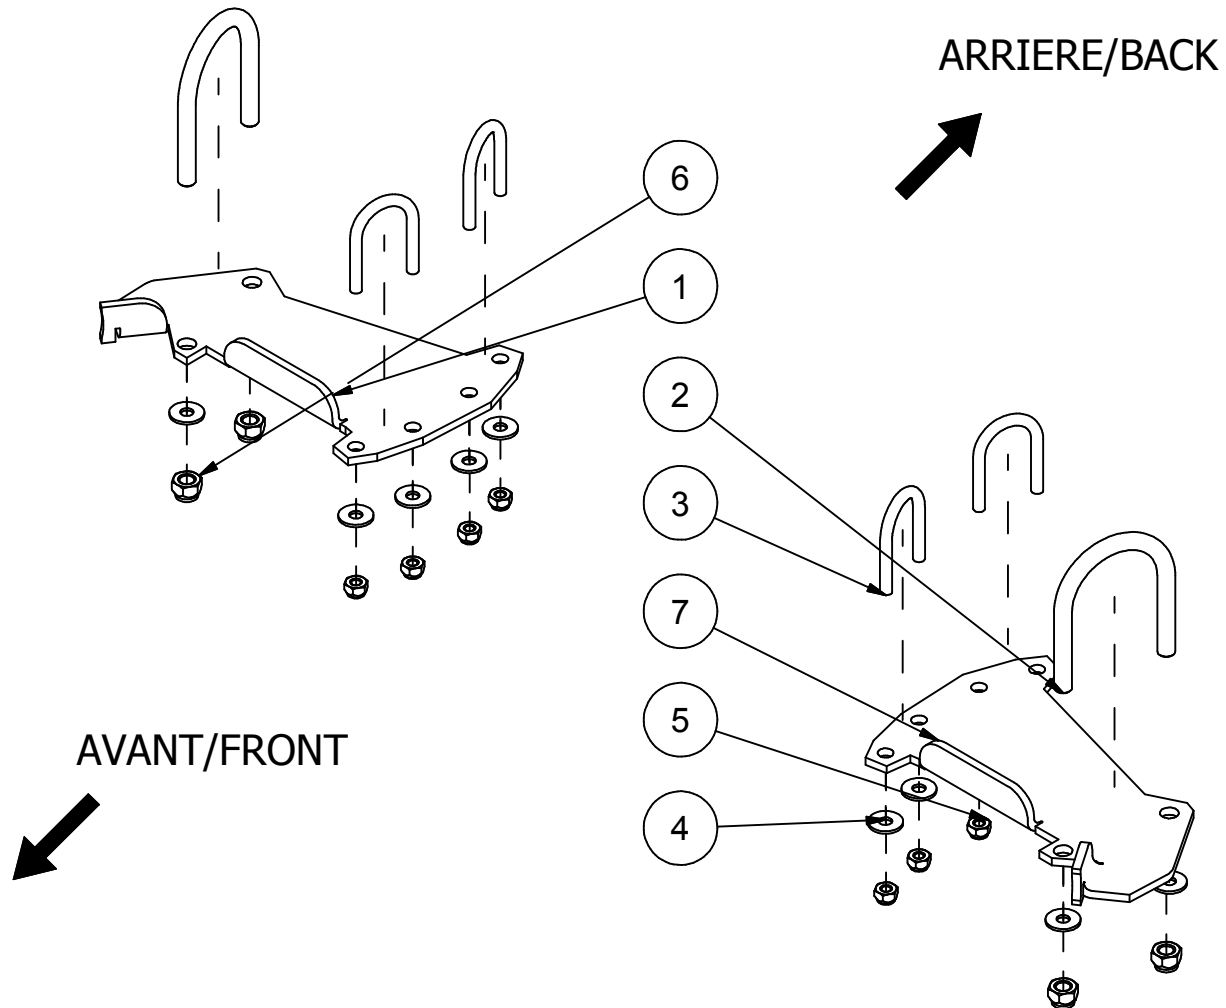

REF	QTÉ/QTY	#pièce/part
1	1	04LB-007G
2	2	UB318-16x2_118x3_118
3	4	UB114-20X1_118X2
4	12	FW114USS
5	8	HLN1/4-20ZBG2
6	4	HLN3/8-16ZBG2
7	1	04LB-007D

2011-01-20



Les Fabrication TJD inc.

147, chemin des Raymond Rivière-du-Loup (Québec), G5R 5X9
www.tjd.ca

99LB-007 ENSEMBLE LIMITEUR BRAQUAGE



Vous n'avez pas à démonter les roues avant pour l'installation des limiteurs de braquage. Assurez vous d'insérer les limiteurs de braquage tel que montré sur l'image ci-dessus. La vis en U doit s'insérer de chaque coté de la tubulure tel que montré sur l'image suivante. Prenez soin de vous assurer que le conduit hydraulique des freins ne soit pas coincé sous le limiteur de braquage.

You do not have to dismount front wheels to install steering limiter. You must assure to insert steering limiters such as shown in the image above. The U bolt must be inserted on each side of the frame tubing as shown on the following picture. Make sure that the hydraulic brake tubing is not clamped under the steering limiter.

2011-01-20



Les Fabrication TJD inc.

147, chemin des Raymond Rivière-du-Loup (Québec), G5R 5X9
www.tjd.ca