


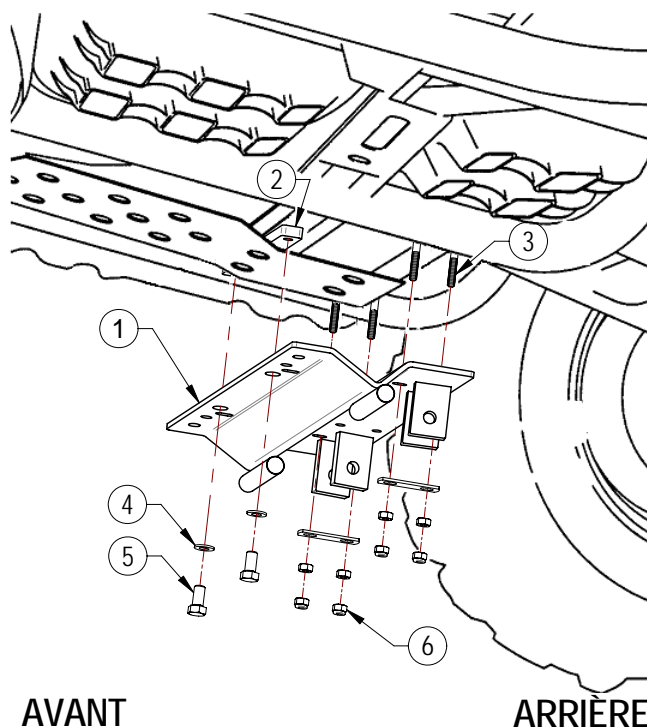

INSTALLATION PLAQUE ADAPTEUR

1. Fixez la partie arrière de la plaque adaptateur (# 1) au châssis du VTT avec deux (2) ensemble de boulons en "U" 1/4" NC x 1-1/8" x 2-1/4" (# 3) et de quatre (4) écrous nylon 1/4" NC (# 6), **sans serrage**.
2. Fixez la partie avant de la plaque adaptateur (# 1) au châssis du VTT avec deux (2) boulons hex. 3/8" NC x 3/4" LG (# 5), de deux (2) rondelles plate 5/16" DIA. (# 4) et d'un (1) support de fixation fileté (# 2). Resserrez tous les boulons et écrous fermement.




Liste de pièces

Réf.	Description	# de pièce (OEM)	Qté.
1	Plaque adaptateur soudée	00PS-103	1
2	Support de fixation fileté	04FP-002	1
3	Ensemble de boulon en U (U-Bolt 1/4"-20x1-1/8"x2-1/4" (1), plaquette (1) et écrou 1/4"-20 (2))	UB1/4x1-1/8x2-1/4_S1	2
4	Rondelle d'appui 5/16" SAE zinc blanc	FW-5/16-SAE	2
5	Boulon à tête hex. 3/8"-16 NC x 3/4"	HB-3/8-16NCx3/4	2
6	Écrou de nylon 1/4"-20NC	HLN-1/4-20NC	4



ADAPTER INSTALLATION

1. Fasten the rear part of the adapter (# 1) onto the frame using two (2) U-bolts KIT 1/4" NC x 1 1/8" x 2-1/4" (# 3) and four (4) self-locking nuts 1/4" NC (# 6), **without tightening**.
2. Fasten the front part of the adapter (# 1) onto the frame using two (2) hex. bolts 3/8" NC x 3/4" LG (# 5), two (2) flat washer 5/16" DIA. (# 4) and the one(1) threaded support (# 2). Secure all nuts and bolts.

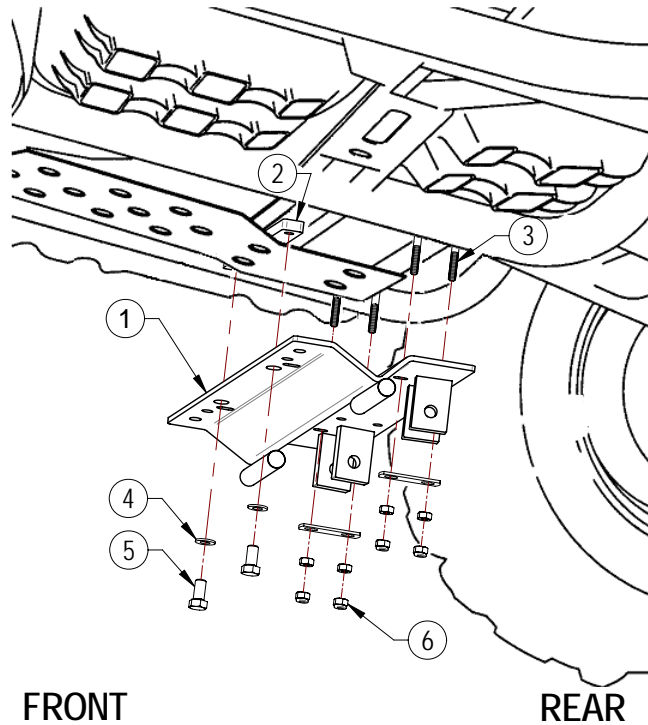

Parts list

Ref.	Description	Item # (OEM)	Qty.
1	Adapter plate	00PS-103	1
2	Threaded support	04FP-002	1
3	U-Bolt kit (U-Bolt 1/4"-20x1-1/8"x2-1/4" (1), plate (1) and nut 1/4"-20 (2))	UB1/4x1-1/8x2-1/4_S1	2
4	Flat washer 5/16" SAE white zinc	FW-5/16-SAE	2
5	Hexagonal bolt 3/8-16NC x 3/4"	HB-3/8-16NCx3/4	2
6	Hexagonal locknut with nylon 1/4"-20NC	HLN-1/4-20NC	4