


99RE-007: RENFORT / STIFFENER

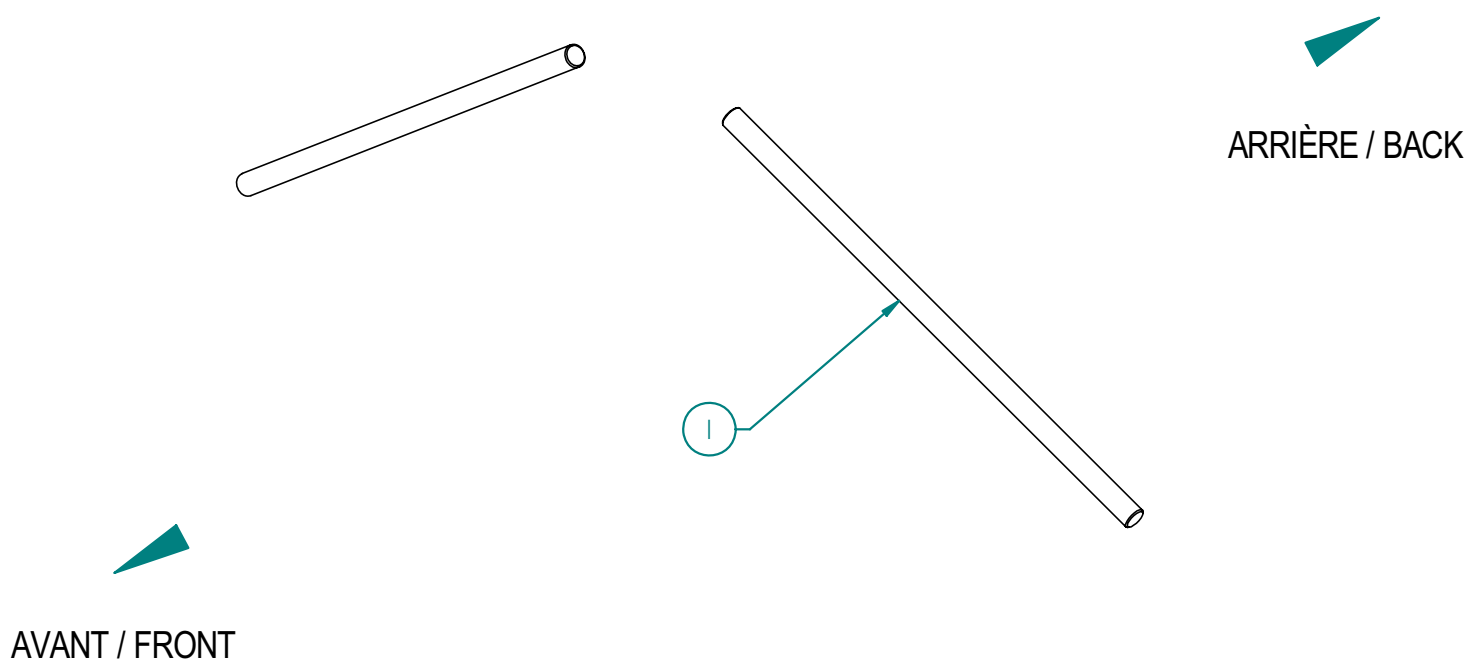



Liste des pièces / Part List

RÉF	# PIECE/PART	QTÉ/QTY
1	04RE-007	2

19/03/2008

**LES FABRICATIONS TJD INC.**147, chemin des Raymond, Rivière-du-Loup (Québec) G5R 5X9
www.tjd.ca

Installation de l'ensemble de renfort

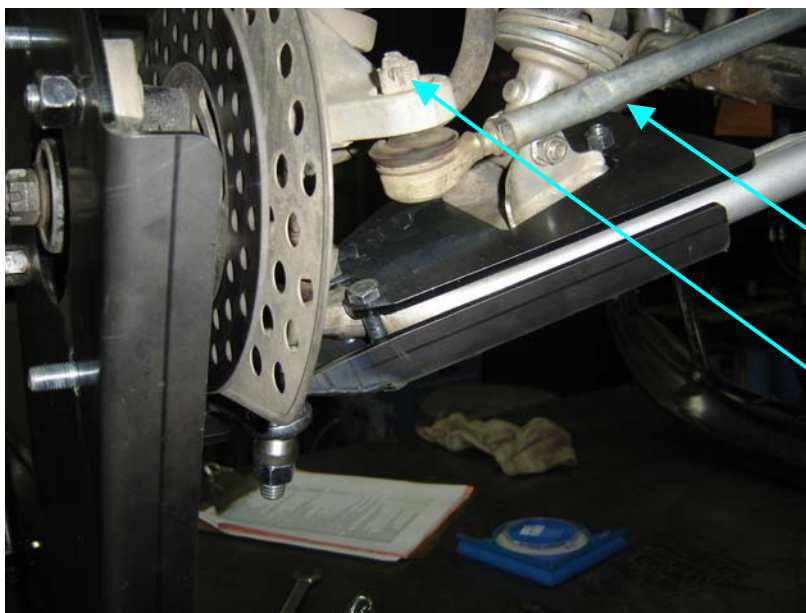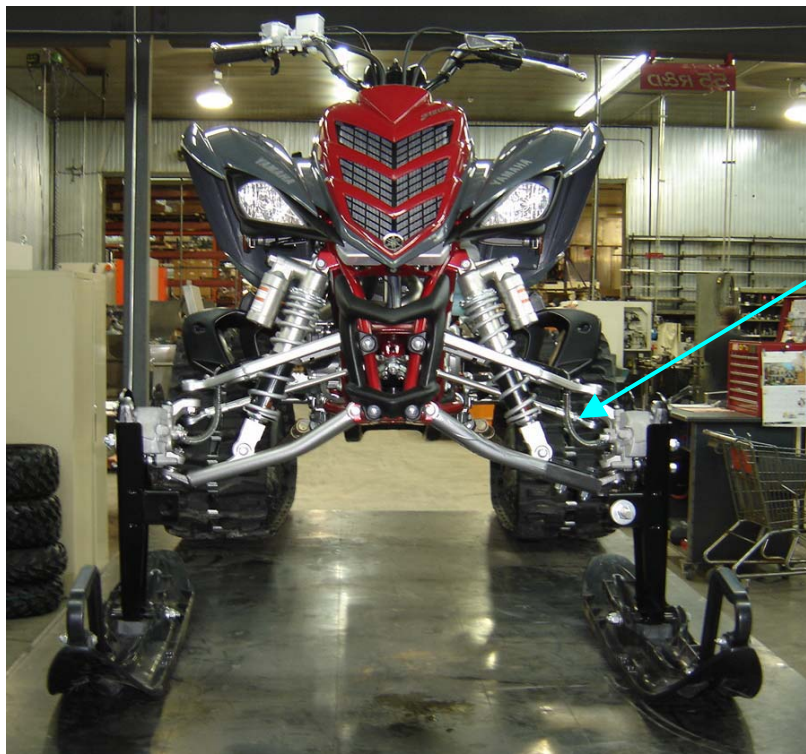


1. Dévisser l'écrou (item 2) et dégager la tige de conduite (item 1).



LES FABRICATIONS TJD INC.

147, chemin des Raymond, Rivière-du-Loup (Québec) G5R 5X9
www.tjd.ca

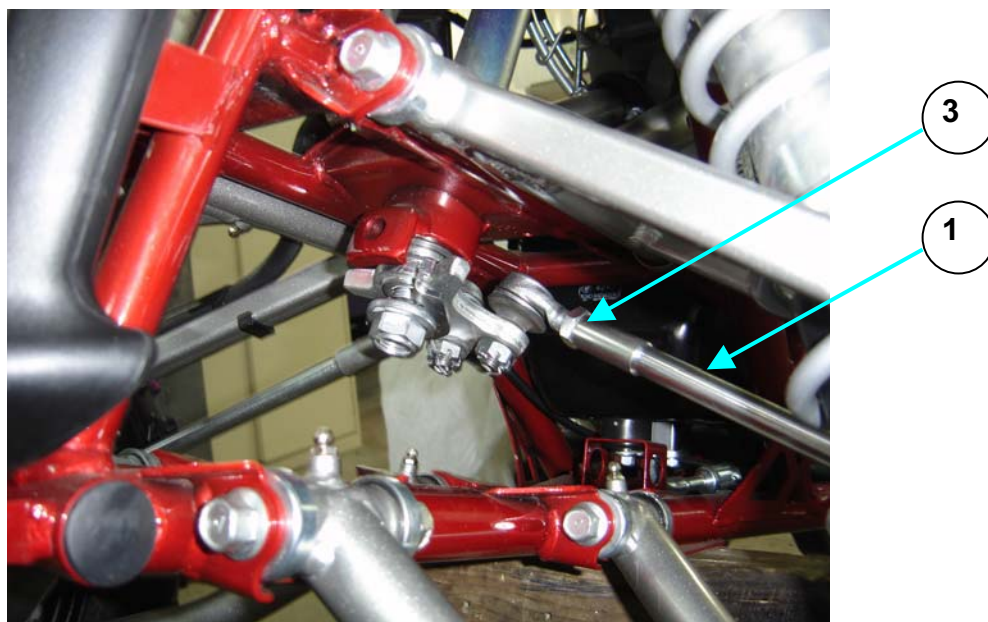

2. Dévisser la tige de conduite (item 1) de la rotule (item 3).
3. Insérer la tige renfort dans la tige de conduite (item 1).
4. Remonter la tige de conduite en répétant les opérations 1 et 2 dans le sens contraire.
5. Répéter les mêmes étapes pour l'autre côté du VTT.



 **Important d'utiliser cet assemblage avec le système de chenille xgen sport seulement.**



LES FABRICATIONS TJD INC.

147, chemin des Raymond, Rivière-du-Loup (Québec) G5R 5X9
www.tjd.ca

Stiffener kit installation

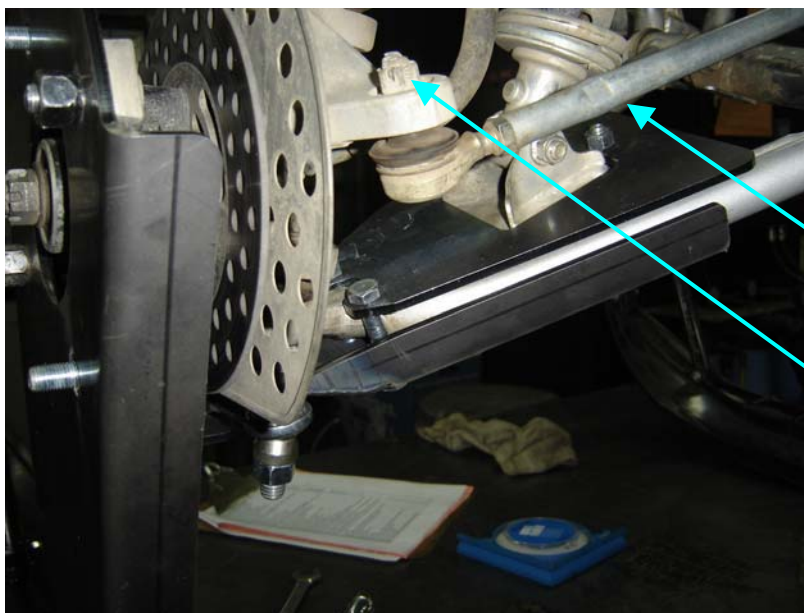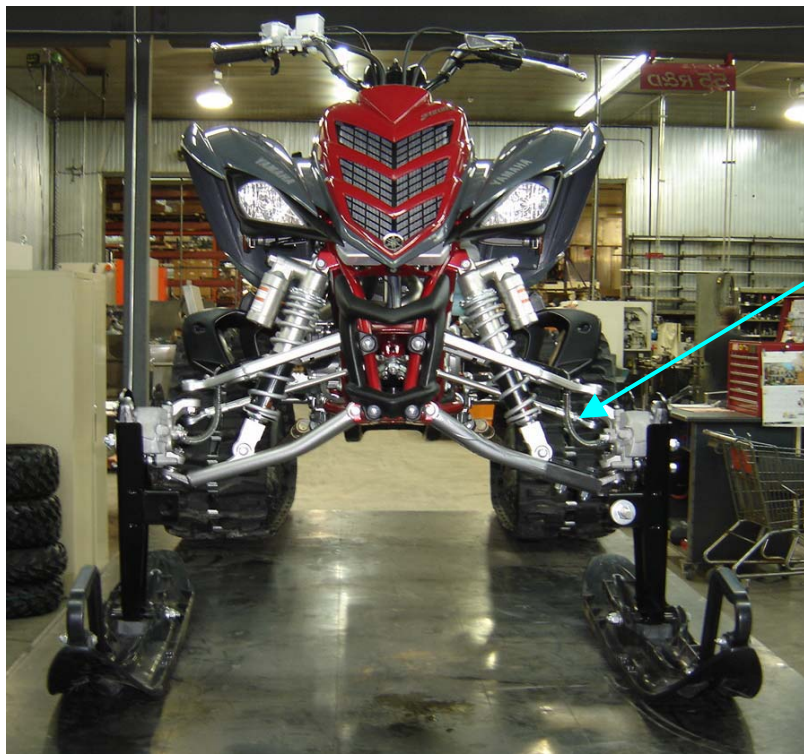


1. Screw off the nut (item 2) and relieve the steering rod (item 1).



LES FABRICATIONS TJD INC.

147, chemin des Raymond, Rivière-du-Loup (Québec) G5R 5X9
www.tjd.ca

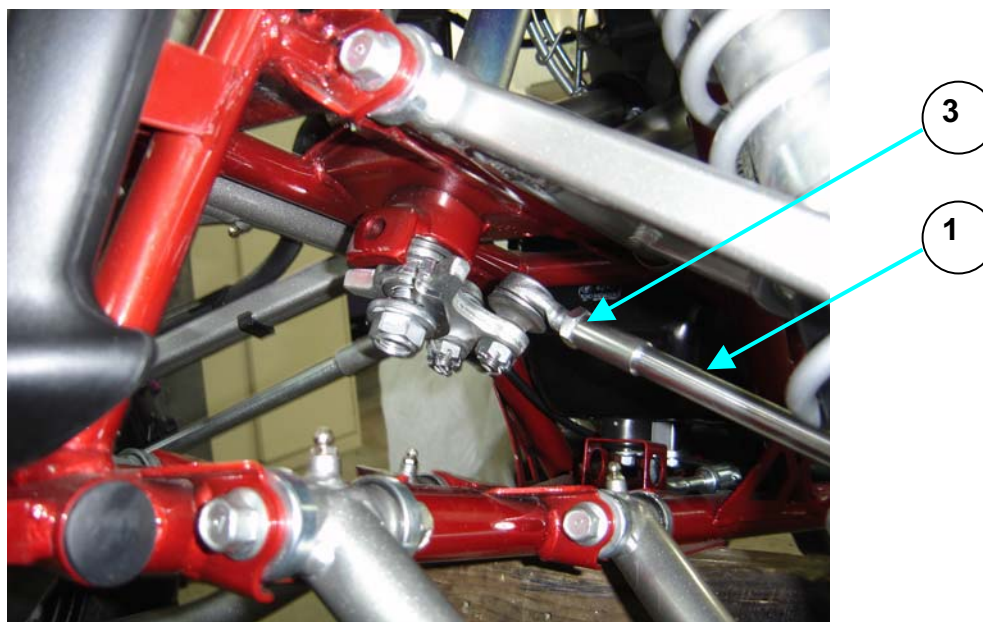

2. Screw off the steering rod (item 1) by the ball joint (item 3).
3. Insert the stiffener in the steering rod (item 1).
4. Repeat operation 1 and 2 in the opposite sense to re-install the steering rod.
5. Repeat the same steps for other side of the vehicle.

 **It's important to use this assembly with the xgen sport system only.**



LES FABRICATIONS TJD INC.

147, chemin des Raymond, Rivière-du-Loup (Québec) G5R 5X9
www.tjd.ca